

# French romantic style

sample-set for Cecilia Magna expander

Pedal	I. manual	II. manual
<ul style="list-style-type: none"><li>• Contrebasse 16'</li><li>• Soubasse 16'</li><li>• Bourdon 8'</li><li>• Grosse Flûte 8'</li><li>• Violoncelle 8'</li><li>• Bombarde 16'</li><li>• Trompette 8'</li><li>• I:P</li><li>• II:P</li></ul>	<ul style="list-style-type: none"><li>• Bourdon 16'</li><li>• Montre 8'</li><li>• Bourdon 8'</li><li>• Flûte harmonique 8'</li><li>• Gambe 8'</li><li>• Prestant 4'</li><li>• Flûte oct 4'</li><li>• Cornet V</li><li>• Trompette 8'</li><li>• Voix Humana 8'</li><li>• Clairon 4'</li><li>• II:I</li></ul>	<ul style="list-style-type: none"><li>• Diapason 8'</li><li>• Cor de nuit 8'</li><li>• Voix céleste 8'</li><li>• Flûte traversière 8'</li><li>• Prestant 4'</li><li>• Flûte douce 4'</li><li>• Nasard 2 2/3'</li><li>• Octavin 2'</li><li>• Carillon III</li><li>• Hautbois 8'</li><li>• Trémolo</li></ul>

## Changing the sample-set

Individual sample-sets can be changed using a dedicated external FLASH disc. The procedure is quite simple:

1. Switch off the organ expander, disconnect the power adapter.
2. Disconnect the USB/MIDI cable and connect the dedicated FLASH disc to the USB connector.
3. Connect the power source again - the logo appears at the display. Within several seconds, the organ expander starts automatically the updating procedure. It is indicated by a blinking LED of a top-left stop tab.
4. After the process is completed, a main screen appears at the display. Now the new sample-set is ready.
5. **REMOVE** the flash disc, connect the USB/MIDI cable again and replace the magnetic labels above the stop tabs.

**WARNING:** user settings are replaced by default values during the process. So correct MIDI channels must be set again.

