

# German Baroque

sample-set for Cecilia Magna expander

Pedal	Hauptwerk	Oberwerk
<ul style="list-style-type: none"><li>• Subbass 16'</li><li>• Bassflöte 8'</li><li>• Prinzipal 4'</li><li>• Posaune 16'</li><li>• HW:P</li><li>• OW:P</li></ul>	<ul style="list-style-type: none"><li>• Bordun 16'</li><li>• Prinzipal 8'</li><li>• Bordun 8'</li><li>• Octav 4'</li><li>• Flöte 2'</li><li>• Nasat 2 2/3'</li><li>• Sesquialtera</li><li>• Mixtur</li><li>• Trommet 8'</li><li>• OW:HW</li></ul>	<ul style="list-style-type: none"><li>• Gedackt 8'</li><li>• Prestant 4'</li><li>• Rohrflöte 4'</li><li>• Octav 2'</li><li>• Quint 1 1/3'</li><li>• Sifflöte 1'</li><li>• Cymbel</li><li>• Dulcian 8'</li><li>• Tremulant</li></ul>

## Changing the sample-set

Individual sample-sets can be changed using a dedicated external FLASH disc. The procedure is quite simple:

1. Switch off the organ expander, disconnect the power adapter.
2. Disconnect the USB/MIDI cable and connect the dedicated FLASH disc to the USB connector.
3. Connect the power source again - the logo appears at the display. Within several seconds, the organ expander starts automatically the updating procedure. It is indicated by a blinking LED of a top-left stop tab.
4. After the process is completed, a main screen appears at the display. Now the new sample-set is ready.
5. **REMOVE** the flash disc, connect the USB/MIDI cable again and replace the magnetic labels above the stop tabs.

**WARNING:** user settings are replaced by default values during the process. So correct MIDI channels must be set again.

